




NEW TUBÒ NEW AIR VACUUM SOCKET

for
BTICINO LIVING NOW®



FUNCTIONALITY, STURDINESS, ELEGANCE
summary of a winning project.

TUBÒ

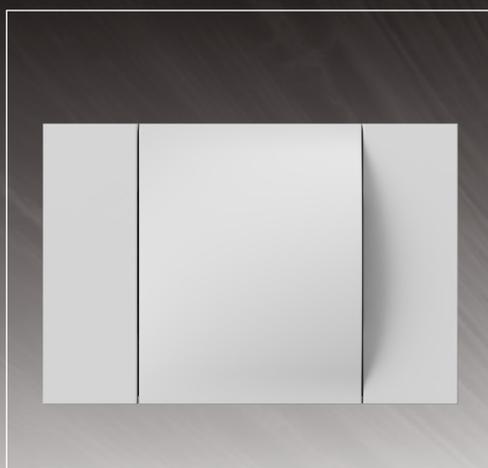

ERGONOMIC



ROBUST



ELEGANT

TUBÒ NEW AIR Vacuum socket for BTICINO LIVING NOW®

This TUBÒ vacuum socket is the result of a meticulous research and development activity by our product design team, and APPROVED by BTICINO.

The goal of this new product is to be able to combine perfectly the new BTICINO LIVING NOW series, with quality design, robustness and practicality of NEW AIR vacuum sockets, that always has been hallmarks of our company.

Through attention to detail, quality of materials and innovative technical solutions, Aertecnica offers solutions to every market need.


TUBÒ NEW AIR Vacuum Socket

for BTICINO LIVING NOW:

Perfect combination of functionality and elegance.

⁽¹⁾ New Air vacuum socket for BTICINO LIVING NOW supplied complete with COVER.
Code composed of: vacuum socket + Cover (electric plate excluded)

⁽²⁾ The BTICINO LIVING NOW® electric finishing plates are not supplied by Aertecnica.

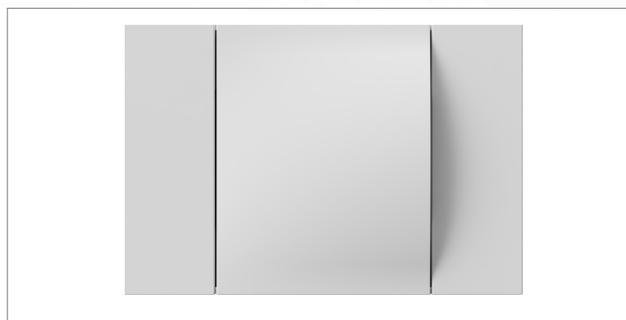

Cod. PA280

NEW AIR BTicino Living NOW Socket, white (electrical switch plates excluded) ⁽¹⁾

Example of combination with BTICINO LIVING NOW electric plate⁽²⁾ with white cover.



Cod. PA281

NEW AIR BTicino Living NOW Socket, sand (electrical switch plates excluded) ⁽¹⁾

Example of combination with BTICINO LIVING NOW electric plate⁽²⁾ with sand cover.




Cod. PA282

NEW AIR BTicino Living NOW Socket, black (electrical switch plates excluded) ⁽¹⁾

Example of combination with BTICINO LIVING NOW electric plate⁽²⁾ with black cover.

How to install it?

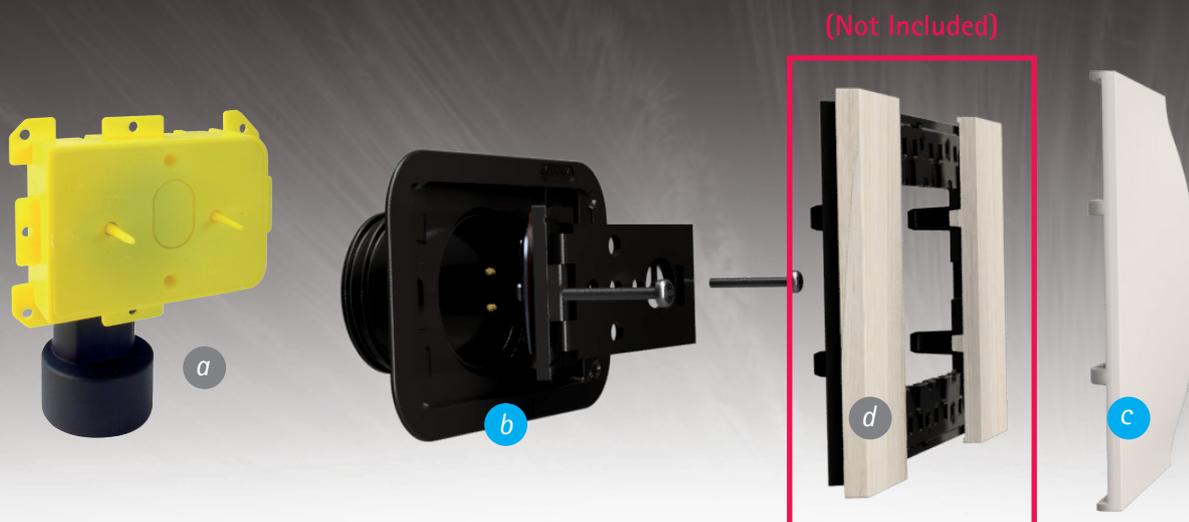

The NEW AIR vacuum socket for BTICINO LIVING NOW, must be installed respecting the following steps:

1. FIX the vacuum sockets NEW AIR **(b)** to the mounting plate **(a)** with the special screws supplied.
2. Insert the BTICINO LIVING NOW * electric plate **(d)** on the vacuum socket **(b)** , using the special hooks.
3. Complete the assembly by inserting the cover **(c)** on the vacuum socket door **(b)** .

(a)	New Air Socket Frame (Cod. PA012 - PA014 -PA022)*
(b)	NEW AIR vacuum socket for BTICINO LIVING NOW®
(c)	Cover supplied with the vacuum socket NEW AIR for BTICINO LIVING NOW®. Available in three colors: White (Cod. PA280) , Sand (Cod. PA281), Black (Cod. PA282)
(d)	BTICINO LIVING NOW® Electric finishing plate**(Not Included)

(*) The New Air socket frame are separate codes of Aertecnica.

(**) The BTICINO LIVING NOW® electric finishing plates, are not supplied by Aertecnica.

SPARE PARTS FOR NEW AIR VACUUM SOCKET for BTICINO LIVING NOW®



Cod. PA090

Finishing cover for New Air vacuum socket for BTICINO LIVING NOW®, white
(conf. 5 pieces)



Cod. PA091


Finishing cover for New Air vacuum socket for BTICINO LIVING NOW®, sand
(conf. 5 pieces)



Cod. PA092

Finishing cover for New Air vacuum socket for BTICINO LIVING NOW®, black
(conf. 5 pieces)

Assembling the BTICINO LIVING NOW vacuum socket: three simple steps

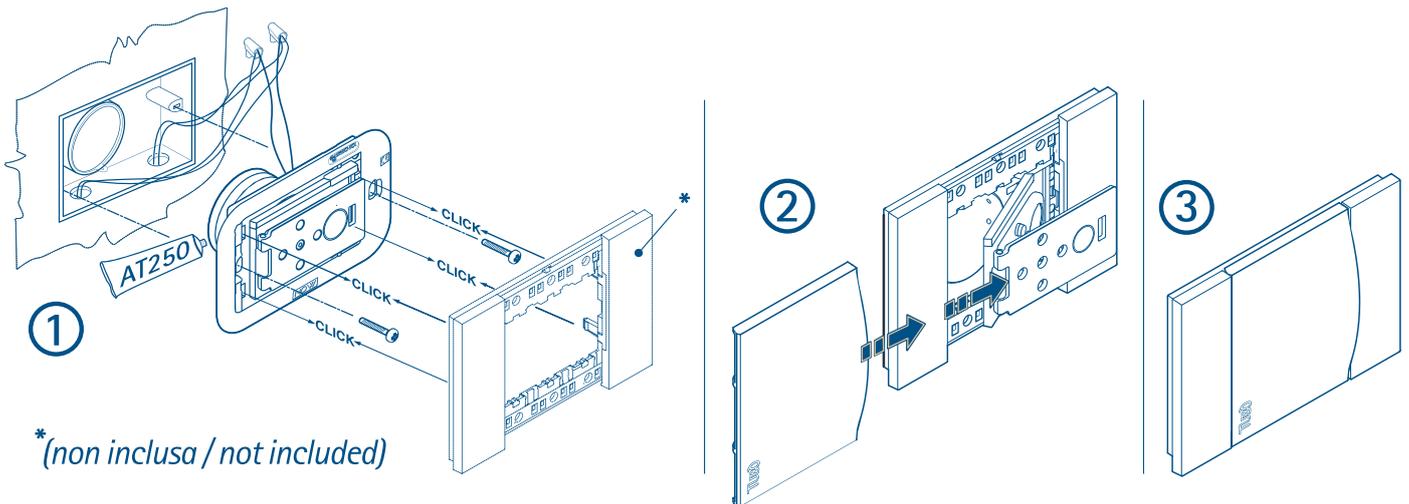

Installation of the BTICINO LIVING NOW vacuum COVER

