


TUBÒ I Link

CMT820

EN Installation instructions

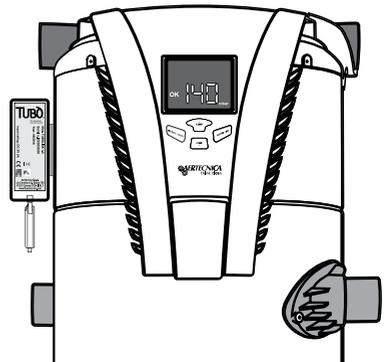

WELCOME TO TUBÒ | Link

ABOUT TUBÒ | Link

TUBÒ I Link is a device which allows you to receive the system operation data from your TUBÒ central vacuum unit so that it can be accessed at any time, wherever you are via the My Tubò App.

CONNECTION TYPES

LOCAL AREA NETWORK CONNECTION (real time)

is when your Smartphone or Tablet is connected to the same network as the TUBÒ I Link. The information flow from the central vacuum unit is continuous with this type of connection.

REMOTE NETWORK CONNECTION

is when your Smartphone or Tablet sends and receives data from your mobile data provider. The information is updated every 20 seconds with this type of connection, or by pressing the **Update** key on the My Tubò App.

USE

Using the My Tubò App, installed on your Smartphone or Tablet, enable connection to the TUBÒ I Link connected to your central vacuum unit and check all the technical data collected with details of the last 10 operations.

If the central vacuum unit experiences any faults or block, a notification will be sent to inform you of the problem. You can use the My Tubò App to restore the fault or block.



COMPATIBLE CENTRAL VACUUM UNITS

The TUBÒ | Link can be installed for use with all the Aertecnica central vacuum units listed in the table

CENTRAL VACUUM UNIT LINE	MODELS
PERFETTO STAINLESS STEEL	TXA
PERFETTO	TPA / TP
CLASSIC	TC
X-PERT	RT

INSTALLING THE DEVICE TUBÒ | Link

The TUBÒ | Link device can be easily installed on the body of the central vacuum unit (A) using double-sided adhesive (B).

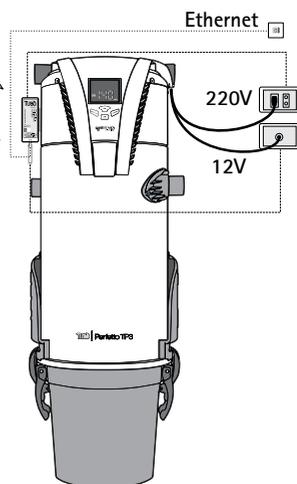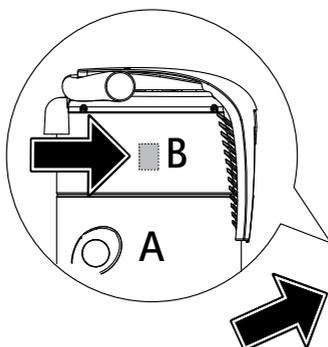

HAZARD

The room where the TUBÒ | Link is installed must always be kept dry and protected from the elements.

SIGNALS



RED LED - Power Supply Indicator

FLASHING GREEN LED - USB-485 communication active

TUBÒ | Link ACTIVATION

Activating TUBÒ | Link is quite simple:


FOR CENTRAL VACUUM UNITS- MODELS TP, TC, TX

- Connect the supplied 485/USB to the 485 serial port of the central vacuum unit

YELLOW WIRE OF THE CENTRAL VACUUM UNIT (TXA) TO YELLOW WIRE OF THE 485/USB ADAPTER .

GREEN WIRE OF THE CENTRAL VACUUM UNIT (TXB) TO GREY WIRE OF THE 485/USB ADAPTER

- Connect the 485/USB adapter to the USB port of the TUBÒ | Link
- Connect the Ethernet plug of the TUBÒ | Link to the Internet via an RJ45 Ethernet cable
- Connect the TUBÒ | Link to the household power supply using the dedicated power pack.

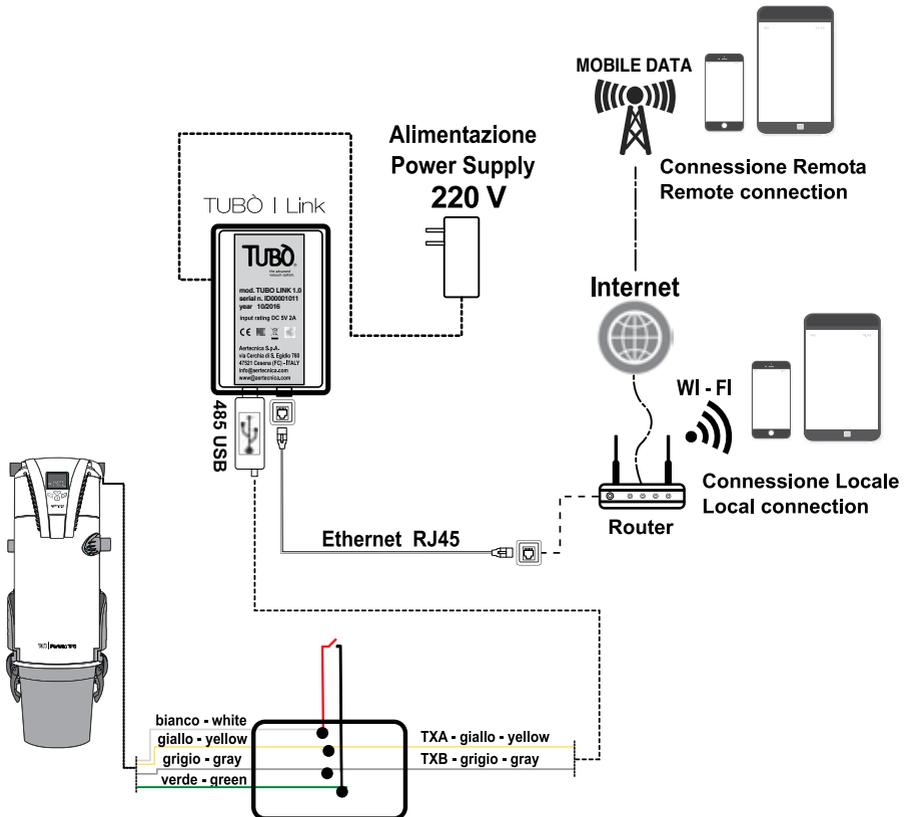


FOR X-PERT SERIES CENTRAL VACUUM UNITS

- Connect the LS serial port of the central vacuum unit to the 485/USB supplied

YELLOW WIRE OF THE 485/USB ADAPTER TO THE TXA OF THE CENTRAL VACUUM UNIT

GREY WIRE OF THE 485/USB ADAPTER TO THE TXB OF THE CENTRAL VACUUM UNIT

- Connect the 485/USB adapter to the USB port of the **TUBÒ | Link**
- Connect the Ethernet plug of the **TUBÒ | Link** to the Internet via an RJ45 Ethernet cable
- Connect the **TUBÒ | Link** to the household power supply using the dedicated power pack.

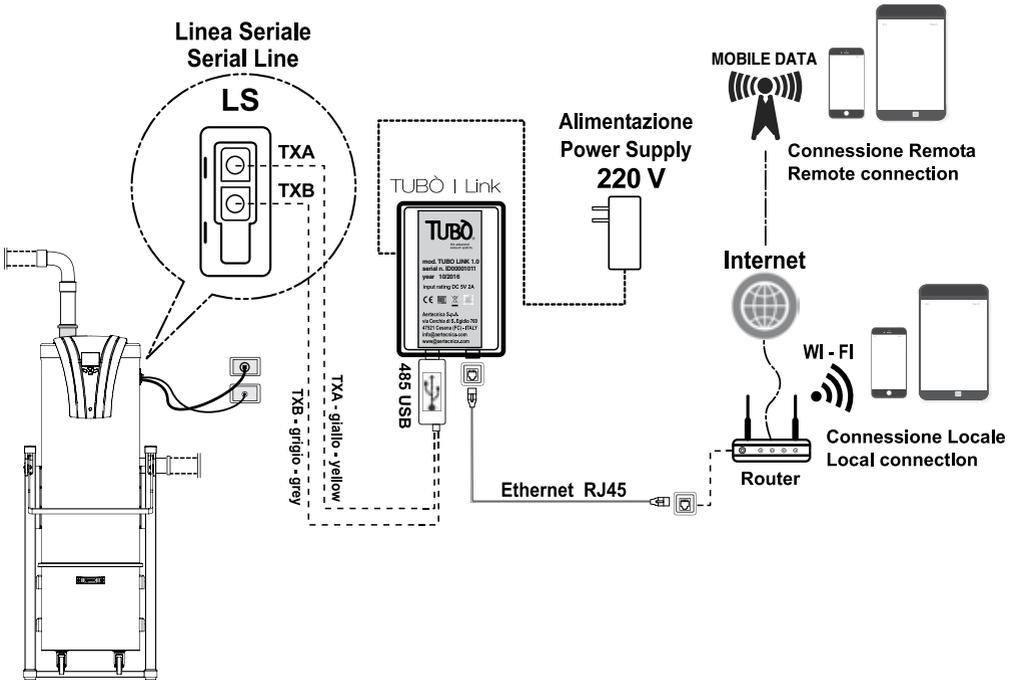

TUBÒ | Link REGISTRATION

To complete installation you must register your **TUBÒ | Link** at our website:

www.mytuboweb.com

The registration manages the access privileges based on the user profile - Installer / User.

INSTALLER

with a single user profile, the installer can manage every customer equipped with the **TUBÒ | Link**

USER

each user can create their own user profile and independently monitor the management system of their central vacuum unit.

Once registered, the access credentials for the My Tubò App will be sent by mail.

DOWNLOAD THE My Tubò APP

Download the My Tubò App for the Android platform (Google Play) or the iOS platform (App Store).

At start up,insert the My Tubò App login credentials you received by mail.

The command and management system for your central vacuum unit is ready for use.

You can download **TUBÒ | Link** for the Android operating system from



You can download **TUBÒ | Link** for the iOS operating system from



EN

The descriptions and illustrations may change. Aertecnica SpA reserves the right to modify the product and the related technical documentation without incurring any obligation to third parties.



AERTECNICA S.p.A.

Via Cerchia di Sant'Egidio, 760
47521 Cesena (FC) - ITALY
Tel. +39 0547 637311
Fax +39 0547 631388
info@aertecnica.com
www.aertecnica.com

